# touch screen 12-segment programmer (6 ramp-soak cycles), 8 programs, digital timer 99h 59 '




touch screen  12-segment programmer (6 ramp-soak cycles), 8 programs, digital timer 99h 59 '

power on delay function

time calculation starting from the achievement of the set point

| Code | Description |
|---|---|
| **8843203** | touch screen 12-segment programmer (6 ramp-soak cycles), 8 programs, digital timer 99h 59 ' |

## Accessories

| Foto | Code | Description |
|---|---|---|
|  | 9051004 | |
|  | 9051006 | |
|  | 9051010 | |
|  | 9051016 | |
|  | 9051025 | |
|  | 9051040 | |
| | 9051075 | |

| Foto | Code | Description |
|---|---|---|
|  | 90510xx | |
|  | 9054002 | |
|  | 9054004 | |
|  | 9054006 | |
|  | 9054010 | |
|  | 9054016 | |
|  | 9054025 | |
|  | 9054040 | |
|  | 9054075 | |
|  | 9061002 | |
|  | 9061004 | |
|  | 9061006 | |
|  | 9061010 | |

| Foto | Code | Description |
|---|---|---|
|  | 9061016 | |
|  | 9061025 | |
|  | 9061040 | |
|  | 9061075 | |
|  | 9064002 | |
|  | 9064006 | |
|  | 9064010 | |
| 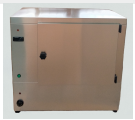 | 9064016 | |
|  | 9064025 | |
|  | 9064040 | |
| 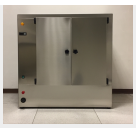 | 9064075 | |
|  | 9067009 | |

| Foto | Code | Description |
|---|---|---|
|  | 9067014 | |
|  | 9067034 | |
|  | 9067046 | |
|  | 9067070 | |
|  | | |